


XC - XBAN-C Installation

BANNER SIZES:

X-BANNER STAND C: 36"-47" wide x 70"-79" tall


X-BANNER STAND C1: 20"-24" wide x 61"-63" tall

X-BANNER STAND C2: 31.5" wide x 70" tall

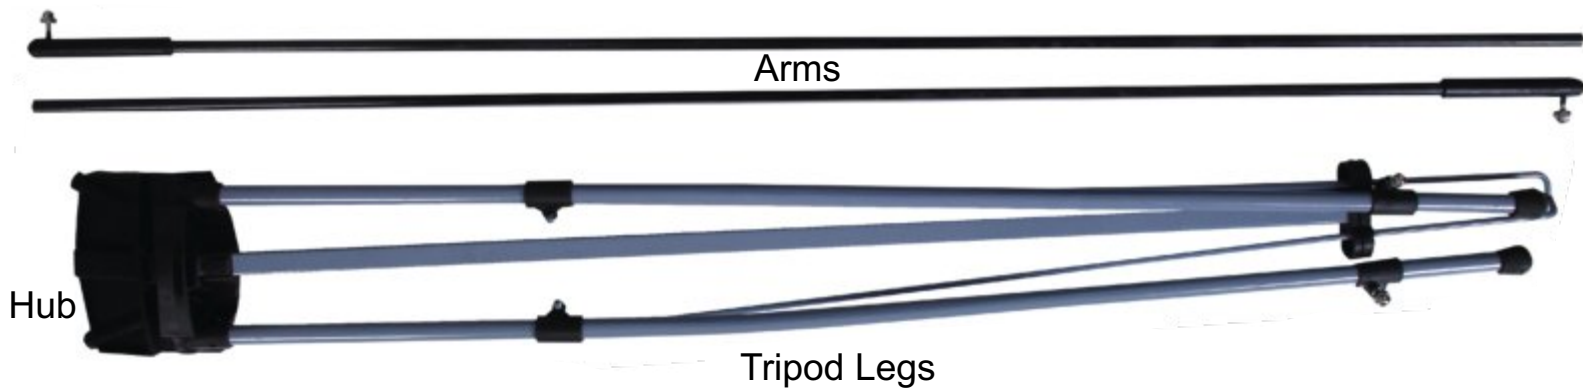

1. Banner must have a grommet in each corner and fall within the size ranges listed above.

2. Open the bottom Tripod Legs and insert the Arms into the top of the Hub.

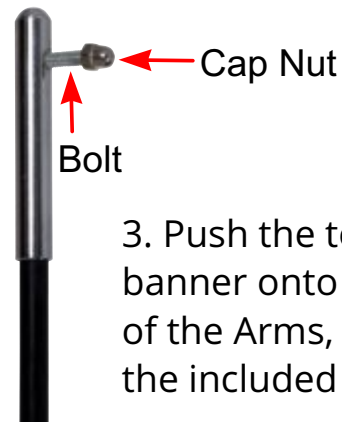

3. Push the top grommets of the banner onto the Bolts at the top of the Arms, then secure with the included Cap Nuts.



4. Pull down the banner and hook the bottom grommets onto the Bolts on the Legs. Then secure with Cap Nuts.